


Fine balanced tire



50g weight



Press P7+P3 at the same time then display

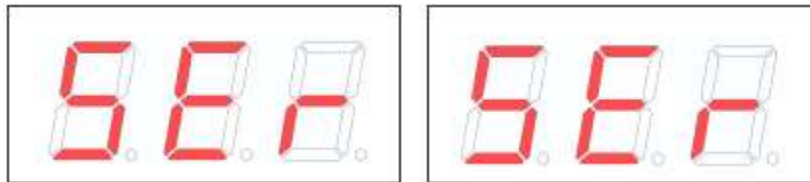

1. press  to display

CAL	CAR
-----	-----

2. Press  to display

CAL	0
-----	---

Then put down the cover to run the machine without the tire on the shaft, then display

CAL	1
-----	---

3. Mount the tire onto the shaft and input the three parameter of the tire.

4. Then put down the cover to run the machine. After stop rotation, rotate the tire by hand slowly till display “50” on the left window. Then clamp 50g weight at the top of the rim.

5. Then put down the cover to run the machine. After stop rotation, remove the 50g weight from the rim. Then rotate the tire by hand slowly till display “50” on the right window. Then clamp 50g weight at the top of the rim. put down the cover to run the machine. The calibration is finished when stop.